

C1638M (4/05) EPSPWR-300 Power Supply Replacement

The EPSPWR-300 power supply can be used to replace a failed power supply in the EPS5000-300. You can easily replace either of the two power supplies in the EPS5000-300 in case of failure. You will know if there is a problem with a power supply because the blue Pelco badge on the front panel will turn off. Before replacing a power supply, check the fuse. It can be replaced easily with the supplied spare. If the fuse is not the problem, then follow these steps and refer to Figure 2 to replace the power supply.

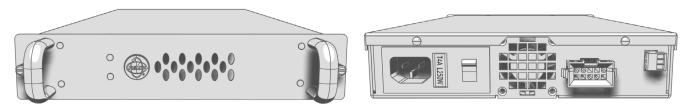


Figure 1. EPSPWR-300 Power Supply

- 1. Disconnect the over-molded cable and the power cord from the failed power supply.
- 2. Unscrew both thumbscrews of the failed power supply.
- 3. Remove the power supply.
- 4. Insert the new power supply.
- 5. Secure the power supply by tightening both thumbscrews.
- 6. Connect the over-molded cable from the power supply to the RK5000PS-5U.
- 7. Plug in the AC power cord.
- 8. Turn on the power switch.

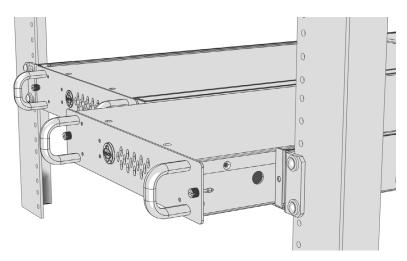


Figure 2. Power Supply Replacement



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

Worldwide Headquarters • 3500 Pelco Way • Clovis, California 93612 USA • www.pelco.com USA & Canada • Tel: 800/289-9100 • Fax: 800/289-9150 International • Tel: 1-559/292-1981 • Fax: 1-559/348-1120